ALBA MODEL 550 SUPERHET A.C. MAINS FOUR

CIRCUIT.—A 4-valve receiver operating from A.C. mains and covering the usual medium and long wavelengths.

The aerial is coupled to V1, a frequency changer, through a band-pass coil. Signals then pass via an I.F. transformer tuned to 117.5 kcs. to V2, an H.F. pentode, which is coupled by means of a second I.F. transformer to V3, a double diode valve.


The rectified output of V3 is passed via a resistance and capacity stage incorporating the volume control, to V4, the output pentode, and then to the loud speaker via a matching transformer.

One diode of V3 is employed to supply A.V.C. bias to the preceding valve in the orthodox manner.

When the receiver is switched to the gramophone position, the input is to the grid of V2, which is resistance and capacity coupled directly to the output pentode.

Mains equipment consists of transformer, full wave rectifier, electrolytic condensers and the speaker field.

_C.	Purpose.		Mfd.
1	V1 A.V.C. decoupling		.1
2 3 4 5 6 7 8	V1 and V2 screen decoupli	ng 📙	2
3	V1 cathode bias shunt		.1
4	V1 osc. grid		.0002
5	Long wave padding		.0005
6	V1 osc. anode decoupling		.1
7	V2 cathode bias shunt		25
8	H.F. filter		.0001
9	V2 anode decoupling		.25
10	H.F. by-pass		.002
11	H.F. by-pass		.0002
12	A.V.C. diode coupling		.0002
13	L.F. coupling		.005
14	V4 cathode bias shunt		25
15	Pentode compensating		.005
16	H.T. smoothing		12
17	H.T. smoothing		8
18	Mains aerial		.0002

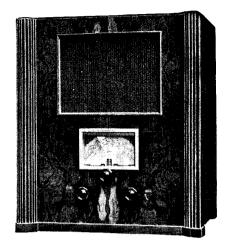

A. J. Balcombe are the makers of the Alba 550, an A.C. superhet four covering long and medium bands.

RESISTANCES						
R.	Purpose.	Ohms.				
1	V1 cathode bias	200				
1 2 3 4 5	V1 grid leak	$.05~{ m meg}$				
3	V1 and V2 screen decoupling	.025 meg				
4	V1 oscillator anode decoupling	.1 meg				
5	V1 and V2 A.V.C. decoupling	1 meg				
6	V2 cathode bias	400				
6 7 8 9	V2 anode decoupling	5,000				
8	V2 anode L.F. load	10,000				
9	H.F. filter	.05 meg				
10	V3 demodulator diode load.	1 meg				
11	A.V.C. diode load (part)	.5 meg				
13	Volume control	.5 meg				
14	V4 cathode bias	150				
	·					

Special Notes.—The dial lamps are rated at 3.5 volts .15 amp. To remove them, turn the pointer until it is vertical, and the bulb holder may then be unclipped by sliding it sideways.

The external speaker is connected on the primary of the output transformer, and should therefore possess its own matching transformer.

Removing chassis.—Remove knobs from front and four bolts from underneath. The chassis will then slide out of the cabinet far enough for the usual tests.

ALIGNMENT NOTES

I.F. Circuits.—The intermediate frequency is 117.5 kes. Remove control grid connection from frequency changer (top cap) and inject a signal of this frequency from a modulated oscillator. Trim for maximum reading on output meter connected across the speaker terminals.

nected across the speaker terminals.

Medium waves.—Connect a modulated oscillator to the aerial and earth terminals via a dummy aerial and an output meter across the external speaker terminals.


(1) Tune the oscillator and the receiver to 500 metres and adjust T1 and T2 for maximum reading on the output meter.

(2) Tune the oscillator and receiver to 220 metres and trim T3 for maximum reading.

(3) Repeat (1) and (2) until quite satisfied that no further improvement is possible.

Long waves.—There is only one adjustment to be made. This is T4, the long-wave padding condenser, which must be adjusted for maximum output at 1,875 metres

(Chassis layouts on page 56.)

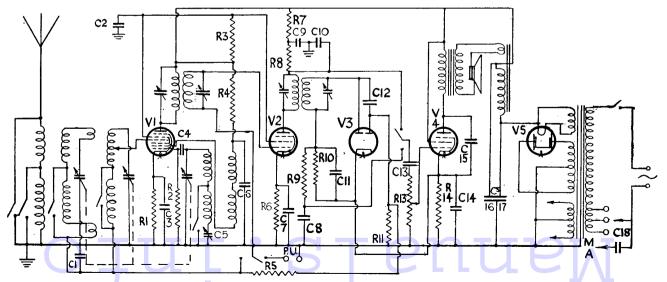

Circuit details of the Alba 550. Gramophone input is to V2, which, when the switch is in the "gram" position, feeds V4




ALBA MODEL 550 SUPERHET A.C. MAINS FOUR


QUICK TESTS

Quick Tests available on this receiver are on the terminal strip on the speaker transformer. Volts measured between this and the chassis should be:—

Red lead ... Black lead ... Blue lead ... 250 smoothed H.T. 230 smoothed H.T. 360 unsmoothed H.T. Below are chassis layouts of Alba's 550. Left, tinted, is the top; right is the underside. All resistors are shown solid black, as in all layout diagrams in the "Service Engineer."

VALVE READINGS No signal. Volume maximum. 200 volt A.C.								
V.	Type.	Electrode.	Volts.	M/a.				
	All Mullard.							
1	FC4 (7) Met	Anode	250	2				
		Screen		2 5.5				
2	VP4A (7)	Osc. anode Anode	58 205	$\frac{1.7}{2.9}$				
	Met	Screen	- 05	1.4				
3	2D4A (5) Met	Diode						
4	Pen 4VB (7)	Anode	240	31				
5	1W3 (4)'	Screen Filament	250 360	3.5				

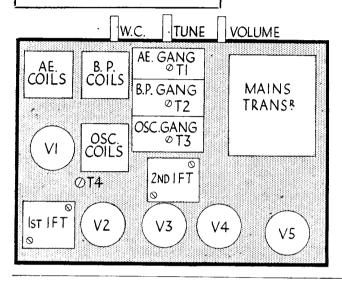

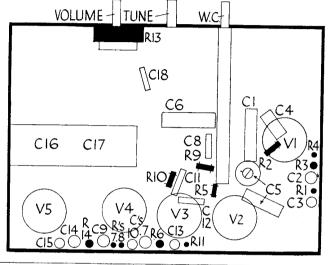

SOUNCO.

REPORTS:

I knew it could not be the Resistors. They are ERIE's, and I've never found a dud one yet. Anyway, the set's working like a lamb!

Advt. of the RADIO RESISTOR CO. LTD., 1 Golden Sq., London, W.1

ERIE RESISTORS

- withstand all extremes of heat and damp.
- and damp.

 Every possible value: rohm to 40 megohms.

 1, 2, 1, 2, & 3 watts.

ERIE INSULATED Resistors

1 & ½-watt resistors available immediately in New insulated type.

"IT IS AN IDEAL VALVE TESTER"

for retail dealers and service men, as a check on any valve can be effected in a few minutes.

Vide "The Wireless World."


A necessity to all Service Men and Dealers. Brings a useful revenue from testing customers' valves and is a sure aid to valve replacement sales.

FOUR-PAGE DESCRIPTIVE FOLDER "B" FREE ON REQUEST

RADIOMETERS LIMITED

DUNBAR WORKS, DUNBAR STREET, LONDON, S.E.27

Telephone: STReatham 2241

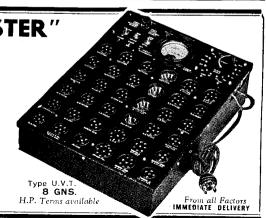

For more information remember www.savoy-hill.co.uk