ALBA 870AC

Four-valve, plus rectifier, three-wavehand superhet. Sockets are provided for a pickup. and a high-resistance extra loudspeaker may be connected to terminals on the output transformer primary. Suitable for operation from standard AC mains. Marketed by A. J. Balcombe, Ltd., 52-58, Tabernacle Street, London, EC2,

ON SW signals are coupled by L11 to the grid | P tuning coil L12, tuned by VC2 section of the triple ganged condenser. On MW and LW bands, signals are coupled by L1 (MW) and L2 (LW) to the band-pass filter unit.

L3 and L4 are the primary windings tuned by VC1 section of the gang, and L9 and L10 are the secondary windings tuned by VC2. L5—L8 are the coupling coils.

Signals are fed to the grid of the frequency changer V1, which is cathode biased by R1, decoupled by C2, and is also connected to the automatic volume control line.

The oscillator section of V1 employs tuned grid circuits across VC3 section of the gang. L14, L16 and L18 are the LW, MW and SW grid coils respectively; while L13, L15 and L17 are the anode feed-, back coils fed from the HT line through R6.

A second IF transformer L21, L22, passed on the the output V4. signal to the signal diode of the double diode V3. the low-frequency signal is fed via decoupling com-

The AVC diode of V3 is fed from L22 via C12, the load resistances being R10 and R11. Full AVC is applied to V1; while the grid circuit of V2 is fed from the junction of R10 and R11.

RESISTORS

R		Ohms	R		Ohms	ŀ
1	 	200	9		 5,000	
2	 	10,000	10		 500,000	ı
3	 	25,000	11	٠.	 500,000	1
4 5	 	25,000	12		 50,000	ı
5	 	1 meg	13		 500,000	Ĺ
6 7	 	13,000	14		 500,000	ı
	 	100	15		 100	l.
8	 • •	150				


For gramophone reproduction via the pickup sockets the pickup output is fed into the grid circuit The intermediate-frequency transformer L19, L20 of V2, which then acts as an LF amplifier. The transfers the IF signal from V1 to the grid of the LF signals developed across R9 are coupled by C14 amplifying pentode V2, which is AVC controlled, to the volume control R14. From here the signal is Cathode bias is derived from R8, decoupled by C7. fed both on radio and gramophone to the grid of


V4 is cathode biased by R15, which also provides R13 is the signal load resistance filtered by C11, and delay volts for the AVC circuit with decoupling effected by C16. A permanent degree of tone ponents R12, C10 and C13 to the volume control correction is effected by C15, and the output transformer L23, L24 couples V4 to the energised movingcoil loudspeaker, of which L25 is the speech coil. L26 the hum-bucking coil and L27 the field winding.

Continued overleaf

CONDENSERS

1	<u>c</u>			Mfds	_ C			Mfds
1	1 2			.1	11			.00025
	3	• •	• • •	.i	12 13	• • •	• •	.00025 .005
	4	• •	• •	.0001	14		::	.005
	6	::	• •	.002	15 16	• • •	• •	.005 25
	7 8	• •		.1	17			12
	ŝ		• •	.002	18 19	• • •	• •	.00025
j	10			.00025			• • •	.00023



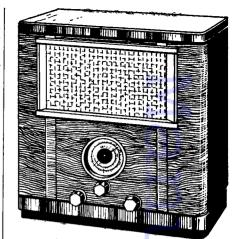

V	LVE READ	INGS		
V	Type	Electrode	Volts	Ma
1	TH4 (Met)	Anode Osc anode Screen	250 110 50	2.3 4.6 4
2	VP4B (Met)	Anode Screen	184 250	13.5 4.6
3	2D4A (Met)			
4	Pen4VB or Pen A4	Anode Screen	228 250	36
5	IW3 or IW4/350	Cathode	290 (app	orox)
P	ilot lamps, 6.2 v,	.3 amps.		

70 6.75 1.6

14

15

50 1.6 3.5

50

50

50 50

500 Very low

1.5 Very low 2,000


300 + 300

Very low

Very low

Very low


(total) (total)

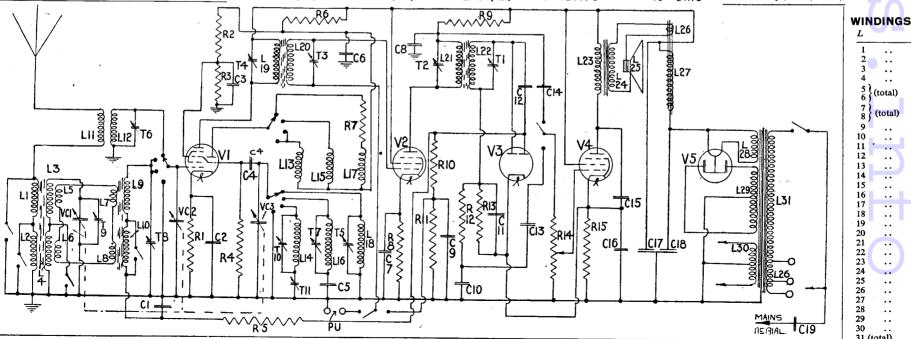

ALBA 870 AC

--Continued---

These two drawings identify the components on the 870AC chassis. Below "deck" resistors are drawn in solid black to distinguish them from small condensers. As the top of chassis view (below) indicates, the trimmers are accessible from above.

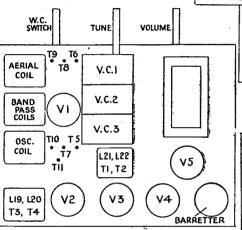

HT is derived from the full-wave rectifier V5 with smoothing effected by the field winding L27 and condensers C17 and C18. A mains aerial lead is provided for picking up HF signals from the mains wiring via C19.

GANGING

IF Circuits.—The manufacturers do not recommend adjustment of the IF circuits without the use of an oscillograph. If alignment has to be carried out a signal of 117.5 kc should be injected into the of the speaker panel. grid circuit of V1 and T1, T2, T3 and T4, adjusted for maximum output.

Band-passing can be effected by slightly staggering | GANGING the adjustments to the trimmers if peaking results in instability or harsh reproduction.

SW Band.—Switch receiver to SW and tune it to

Inject a signal of this wavelength into the aerial and earth sockets and adjust T5 and T6 for maximum output.

MW Band.—Switch receiver to MW and tune it to 200 m. Adjust T7 for maximum output on a signal of this wavelength.

Tune receiver to 500 m, and on a signal of this wavelength adjust T8 and T9 for maximum output. LW Band.—Switch to LW and tune to 1.600 m.

Inject a signal of this wavelength and adjust T10 for maximum output and, while rocking the gang, T11.

BEETHOVEN PI07

VOLUME

CSI

C22

Continued from page iv

TUNE

Bias is supplied to V3 and V4 from the GB section of the HT battery, which is a Sterling combined 105 volts HT plus 3 volts GB, type 2001, and the LT accumulator is also a Sterling 2 volt 15AH celluloid cased jelly acid type 5001.

An Osram 1.25 volt 0.2A fuse, similar to a MES lamp, is included in the HT negative to give protection against accidental short circuits.

A combined switch (S5) and lamp holder houses the pilot lamp, which can be switched off to economise LT current by turning the knurled edge of the holder.

Provision is made for an external high-impedance loudspeaker by means of two sockets at the bottom right-hand corner of the speaker panel. An external aerial can be plugged into the red socket, and earth to the black socket on the bottom left-hand corner

Some models are not fitted with T2, but if present, this trimmer should also be adjusted.

Remove the batteries from the receiver and reconnect outside the cabinet with extension leads. Switch set to MW.

Inject and tune in a 198.5m (1,510kc) signal via A-E sockets, and adjust T1 for maximum output.

VALVE READINGS

\boldsymbol{v}	Type	Electrode	Volts	Ma
1	Mullard	Anode	100	1.7
	VP2	Screen	100	.6
2	Mullard	Anode	68	.6
3	PM2HL Mullard PM2HL	Anode	76	.8
4	Osram KT2	Anode Screen	103 106	5.0
	ages taken with	HT battery readi		ad. No
signal	input.			
Volu	ime control at i	ninimum. MW	minimum ca	pacity.

Reasonable quantities for sale the public . .

> available from vour factor

> > NOW!

Size 2. Multicore Solder Cartons. Each contains sufficient quantity of Ersin Multicore Three Core Solder Wire to make 240 average solder joints. Cartons are very attractively printed in three colours. Net trade price 4/- doz.

Like the makers of many other good things we have for months been trying to keep up with the demand for the 6d. Multicore Cartons. More supplies are now available to meet the demand which has been created by consistent advertising in "hobbies papers" such as "Practical Mechanics," "Practical Engineering," "English Mechanics," "Practical Wireless" and selected national newspapers having a combined circulation of 8,000,000 readers. Get your share of this profit making business by ordering a few dozen cartons NOW!

MULTICORE SOLDERS LIMITED

Commonwealth House, New Oxford Street, London, W.C.1. Tel.: CHAncery 5171-2



For use in your own Service Department. Order nominal 1-lb. reels of Ersin Multicore Solder.

Net trade prices: 13 S.W.G. - - 3/3

16 S.W.G. - - 3/6